

# 23670-51041 Injector Orifice Plate 07# Technical File

SKU1 G1Z11000000007

SKU2 G1L320000007DZ

SKU3 G1L32950400700

SKU4 G1N12950400700

SKU5 G1Z172950400700







# 23670-51041 Injector Orifice Plate 07# Technical File

#### Content

1. 23670-51041 Injector Orifice Plate 07# Introduction	2
1.1. 23670-51041 Injector Orifice Plate 07# Basic Information	2
1.2. 23670-51041 Injector Orifice Plate 07# Common Part Number	2
1.3. 23670-51041 Injector Orifice Plate 07# Specifications and Dimensions	2
1.4. 23670-51041 Injector Orifice Plate 07# Quality Control	2
1.5. 23670-51041 Injector Orifice Plate 07# Customized Service	
1.6.23670-51041 Injector Orifice Plate 07# Packing List	4
1.7. 23670-51041 Injector Orifice Plate 07# Lettering Detail's Display	5
1.8.23670-51041 Injector Orifice Plate 07# Thickness Measurement Tool's Introduction	9
1.9.23670-51041 Injector Orifice Plate 07# Thickness Measurement Methods	10
1.10. 23670-51041 Injector Orifice Plate 07# Warranty Instructions	12
1.11.23670-51041 Injector Orifice Plate 07# Manufacturer	13
2. 23670-51041 Injector Orifice Plate 07# Technical Support	13
2.1.23670-51041 Injector Orifice Plate 07# Inspection and Semi Ball Inspection	13
2.2.23670-51041 Injector Orifice Plate 07# Level of Damage Inspection	
2.3.23670-51041 Injector Orifice Plate 07# Installation Steps	18
2.4.23670-51041 Injector Orifice Plate 07# Technical Support Obtaining Methods	32
3.23670-51041 Injector Orifice Plate 07# Purchase and Delivery	32
3.1.23670-51041 Injector Orifice Plate 07# Purchase Payment Methods	32
3.2.23670-51041 Injector Orifice Plate 07# Main Sales Markets	
3.3.23670-51041 Injector Orifice Plate 07# Declaration Requirements	33
3.4.23670-51041 Injector Orifice Plate 07# Shipping Ways	
3.5.23670-51041 Injector Orifice Plate 07# Lead time	33
3.6.23670-51041 Injector Orifice Plate 07# Logistics Time for Destination Out of China's Areas	33
3.7.23670-51041 Injector Orifice Plate 07# Packing	
4.23670-51041 Injector Orifice Plate 07# Storage Standard	34
5. Company Information	35
5.1. Company Introduction	
5.2. Sales-men's Contact Information	36
6. Copyright Statement	36

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: <a href="mailto:ruby@shumatt.com">ruby@shumatt.com</a> Website: www.shumatt.com



### 23670-51041 Injector Orifice Plate 07# Technical File

#### 1. 23670-51041 Injector Orifice Plate 07# Introduction

#### 1.1. 23670-51041 Injector Orifice Plate 07# Basic Information

Title	China made new 23670-51041 fuel Injector Orifice Plate's 07#
SKU1	G1Z11000000007
SKU2	G1L320000007DZ
SKU3	G1L32950400700
SKU4	G1N12950400700
SKU5	G1Z172950400700

#### 1.2. 23670-51041 Injector Orifice Plate 07# Common Part Number

#### (1) 23670-51041 Injector Orifice Plate 07# Application to Car Model Information

Injector Part Number	ISUZU Car Model	ISUZU Car Model	OE Number	OE Number
23670-51041		23670-59018		

#### (2) 23670-51041 Injector Orifice Plate 07# Part Number Common Writing

07#, 7#, 07, 7, 295040-6120, 2950406120, 2950406120

#### 1.3. 23670-51041 Injector Orifice Plate 07# Specifications and Dimensions

Injector Orifice Plate's Size: 2cm\*2 cm \*1 cm
Injector Orifice Plate's Box Size: 7cm \*7 cm \*2 cm
Injector Orifice Plate's Package Size: 8 cm \* 8cm
Injector Orifice Plate's Net Weight: 0.015kg
Injector Orifice Plate's Gross Weight: 0.03kg

Injector Orifice Plate's Quality: China Made Brand New

MOQ: 4 Pieces

#### 1.4. 23670-51041 Injector Orifice Plate 07# Quality Control

#### (1) 23670-51041 Injector Orifice Plate 07# Testing

All 23670-51041 injector orifice plate 07# parts are subjected to A-hole flow test, Z-hole flow test, precision test, high temperature test, low temperature test, pressure test, leakage test, durability test, and various working condition tests.

#### (2) 23670-51041 Injector Orifice Plate 07# Inspection

The factory inspection of 23670-51041 injector orifice plate 07# is undergone three inspections - full inspection, random inspection, and batch inspection. Different brands of test benches are used to test 23670-51041 injector orifice plate 07# for a total of no less than three times for factory inspection, and 23670-51041 injector orifice plate 07# installation testing environment are progressed in dust-free workshop.

#### 1.5. 23670-51041 Injector Orifice Plate 07# Customized Service

#### (1) 23670-51041 Injector Orifice Plate 07# Customized Service Range:

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

Meet the OEM manufacturers customized demands of orifice plate's lettering, orifice plate's thickness, orifice plate's packing box, orifice plate's anti-rust bag and label etc,.

#### (2) 23670-51041 Injector Orifice Plate 07# Customized Items

No.	3/6	5190 51	5	Agra.	Sign	SI	537	-5%	2	1	Non 21
SHAMOTT SHAM	SHUM!	TIT COMMENT	9	165%	LET AL	9	- NUMAT				
Image	SI SIA.	3		0	LEGIS	9		W	d C		
SALESTY SALE	ALC:	1				g			Α		
Name	Injector Ori	fice Plate's	Front Le	ettering	-AFFE	1	Injector	Orifice I	Plate's S	ide Le	ttering
Description	Orifice plate	part num	ber: <b>07</b> ‡	<b>#</b>		40			/		
No.	OLL FORLL	- 0.50FT	SAULULE .	O MINIT	4000	100	ST. LINE	55.5	4	STATE .	A STORY
Image	SHUMAT	0-25mm 0.001mm	• • • •		5 0 548 45	S S	UMATT				
Name		or Orifice I				200	400	9-Grid			25000
Description	Injector orif 4.02mm∽4		thicknes	s range	2:	- 1	ent dama portation		e orific	e plate	s during
No.	SAN	14.5° 5'	5	4.5	SILVIN	Sly Die	270,377	5547	6	507	AND SI
Image	SHUMATT					He	UMATT				
Name	Neutral Inje	ctor Orific	e Plate's	Individ	ual	Signan	Orifice	Plate's	10pcs P	acking	Вох
Description	Prevent dar transportati	Section 1	e orifice	plates	during	preve		ge to th			ox to es during
						trans	portation	1			

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: <a href="mailto:ruby@shumatt.com">ruby@shumatt.com</a> Website: www.shumatt.com



Image	SHUMATT	SHUMAT T
Name	Injector Orifice Plate's Individual Box	Orifice Plate's 12pcs Packing Box
Description	Liwei orifice plate's individual box	Greenpower orifice plate's 12PCS plastic box to prevent damage to the orifice plates during transportation
No.	9	10
Image	SHUMATT	SHUMATT
Name	Shumatt Orifice Plate's Box	Orifice Plate's VCI Anti-Rust Bag
Description	Shumatt orifice plate's plastic box to prevent damage to the orifice plates during transportation	9-grid orifice plate packaging box's blue VCI anti-rust bag, suitable for long-term storage of the orifice plate
No.	11	race race race and any and
Image	SHUMATT  SHUMATT  COSPCE PLATE  SHUMATT  COSP	SHADON'T SHA
Name	Shumatt Label	and the application of the application
Description	/	/
_ 000pt.011		

#### (3) 23670-51041 Injector Orifice Plate 07# Customized Service Requirements:

Custom lettering of injector orifice plate are not less than 100 pieces.

Custom packing boxes of injector orifice plate are not less than 100 pieces.

The purchase of injector orifice plates are not less than 100 pieces.

When customized products involve the need of specific logo, the OEM manufacturer has to provide trademark authorization and the sample of logo image file.

▲ Once the customized 23670-51041 injector orifice plate 07# is sold, it cannot be returned or exchanged if there is no quality problems.

#### 1.6.23670-51041 Injector Orifice Plate 07# Packing List

(1) 23670-51041 Injector Orifice Plate 07# Spare Parts List

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com Website: www.shumatt.com



No.	1 1 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	2
SUMMER	SHUMATT	SHUMATT
Image		
Survey, Shirt		
Name	Injector Orifice Plate	9-Grid Box
Description	Orifice plate part number: 07#	9-grid plastic box to prevent damage to the orifice plates during transportation. (10pcs or 12pcs packing box is optional)
No.	MATE STATE STATES	THE WATER WITH A STATE WHITE
lmage	SHUMATT	SHUMATT
SALES THE	In a stay Orifica Dista/a la dividuel Bern	Noutral VCI Anti- Bust Pa-
Name	Injector Orifice Plate's Individual Box  To prevent damage to the orifice plates	Neutral VCI Anti - Rust Bag
Description	during transportation. (liwei individual box is optional)	To prevent the orifice plates from rusting.

▲ Minors are forbidden to use 23670-51041 injector orifice plate 07# and orifice plate's box to avoid personal injury.

▲ The orifice plate's plastic box is recyclable and can be reused.

▲ VCI anti-rust bag is non-degradable, please dispose them properly after using.

#### 1.7. 23670-51041 Injector Orifice Plate 07# Lettering Detail's Display

### (1) Orifice Plate's Lettering

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: <a href="mailto:ruby@shumatt.com">ruby@shumatt.com</a>

© 2022 Shenzhen Shumatt Technology Co., Ltd





Pic No. 1

1: Oil Port Number	2: Grade Recognition Number	3: Manufacture Number	177 Last 1

#### (2) Orifice Plate's Structure



Pic No. 2

4: Oil Inlet	5: Stabilizing Pin	6: Front of Oil	7: Mark Location
Story Story Story	Mary 26gr. 26gr.	Back-flow Hole	21/2 21/2 21/2 21/2 21/2

# (3) 23670-51041 Injector Orifice Plate 9# Liwei Orifice Plate's Multi-angle Pictures

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

# Shenzhe

# Shenzhen Shumatt Technology Co., Ltd




Mob/WhatsApp: +86 13410541523

Email: <a href="mailto:ruby@shumatt.com">ruby@shumatt.com</a>

© 2022 Shenzhen Shumatt Technology Co., Ltd

Tel: +8675523215133

### 23670-51041 Injector Orifice Plate 07# Neutral Orifice Plate's Multi-angle Pictures

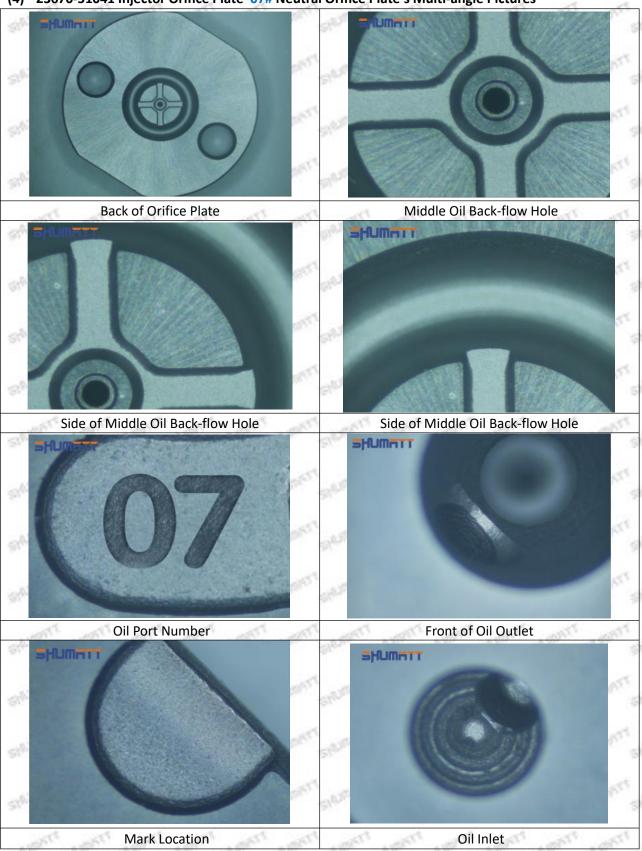

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd



#### 1.8.23670-51041 Injector Orifice Plate 07# Thickness Measurement Tool's Introduction

#### (1) Electronic Vernier Caliper


#### Technical Parameters

1. Made of stainless steel.

2. Resolution: 0.01mm/0.001.

3. Can set on zero at any location.

#### Parts' Name

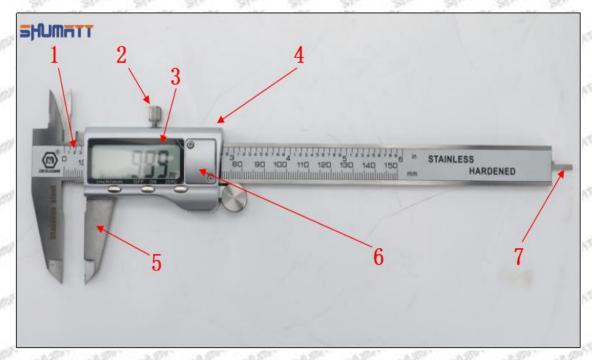

Pic No.1

1: Caliper Body	2: Caliper Frame Fastening Screw	3: LCD	4: Data Output Port
5: Data Output Port	6: Battery Cover	7: Depth Bar	/

#### (2) Electronic Digital Display Micrometer

#### Technical Parameters

1. Range: 0-25mm,25-50mm,50-75mm,75-100mm

2. Resolution: 0.001mm

3. Power: Voltage 1.5V button battery
4. Working Temperature: 0∽+40°C
5. Storage Temperature: -20∽+70°C
6. Environment Humidity: ≤80%

Parts' Name

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email : <a href="mailto:ruby@shumatt.com">ruby@shumatt.com</a>
Website : <a href="mailto:www.shumatt.com">www.shumatt.com</a>
© 2022 Shenzhen Shumatt Technology Co., Ltd





Pic No.2

1: Micro-tube	2:Ratchet Force	3: Data Output	4: Display	5: mm Function
	Measuring Device	Port	Screen	Key
6: ON/OFF ZERO Function Key	THE TRUTT THE PARTY	THE PARTY OF THE PARTY	AND THE PARTY	STREET, PRINTS

#### 1.9.23670-51041 Injector Orifice Plate 07# Thickness Measurement Methods

#### (1) Electronic Vernier Caliper

- Preparation: Clean all surfaces of the caliper with a dry soft cloth, please make sure there is a battery in the caliper before using it;
- 2. Press the OFF/ON button on the vernier caliper to turn on the caliper;
- 3. When you turn on the vernier caliper, sometimes there is data on the screen. This is because the caliper is not fully closed. You can roll the caliper with fingers to close it, and then press the ZERO button to return to zero;
- Put the orifice plate into the caliper and press it tightly by rolling the button;
- 5. After tightening, use the other hand to tighten the upper button of the caliper to prevent looseness from affecting the accuracy of the reading. Last read the data.

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com Website: www.shumatt.com





Pic No.1

A Notice: When using the electronic vernier caliper, be sure to return on zero port, otherwise there will be a large error in the measurement results!

#### (2) Electronic Digital Display Micrometer

1. Preparation: Clean all surfaces of the caliper with a dry soft cloth, please make sure there is a battery in the caliper before using it;

#### 2. Use of ON/OFF ZERO function key:

In the "off "state, short press the ON/OFF ZERO function key to start up, the micrometer is in the metric reading (shown on the right of the display "mm") mode and display the set value. If there is no set value, the initial value is displayed as "0".

In the power-on state, press and hold (more than 2 seconds) the ON/OFF ZERO function key to shut down.

In the power-on state, short press the ON/OFF ZERO function key, and the display returns to the set value or the initial value "0".

#### 3. Use of "mm" function keys:

In the power-on state, short press the "mm" function key to realize the conversion of metric ("mm" is displayed on the right side of the display) and inch ("in" is displayed on the right side of the display) display mode.

In the power-on state, press and hold (more than 2 seconds) the "mm" function key to enter the setting value mode;

#### Setting of set value:

Long press (more than 2 seconds) the "mm" key to make the first character flash, and short press the ON/OFF ZERO key to select any number from 0 to 9;

Short press the "mm" key, and jump to the next character to flash, use the same method to select all the characters, press and hold (more than 2 seconds) the "mm" key to complete the preset value, then the character will no longer flash;

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com Website: www.shumatt.com

Once the setting value is set, it will last until the battery is removed or the battery is exhausted.

#### Data Transfer Method:

Open the data output port cover, insert the data acquisition line (need to be purchased separately) into the outer micrometer, and connect the other end to the company's data acquisition adapter (need to be purchased separately) or connect to the computer.



Pic No.2

#### 1.10. 23670-51041 Injector Orifice Plate 07# Warranty Instructions

#### (1) . 23670-51041 Injector Orifice Plate 07# Warranty Conditions and Instructions

It is necessary to provide the pictures, videos of 23670-51041 injector orifice plate 07# when the injector orifice plate is abnormal during use or the test report of 23670-51041 injector orifice plate 07# inspection equipment as evidence to feedback to the salesman.

Abnormal conditions are properly explained such as: 1.Black smoke, 2. Engine shake, 3. Difficulty starting the engine, 4. Engine noise, 5. Oil leakage etc.

The above conditions may also be affected by incorrect installation of the fuel injector. If it is confirmed that it is product problem after being tested by our company, the injector orifice plate is within the scope of warranty.

#### (2) . 23670-51041 Injector Orifice Plate 07# Warranty Coverage

After customer receives the 23670-51041 injector orifice plate 07# within 15 days , customer can choose to replace it if there is a performance failure and the product has no appearance damage;

If the 23670-51041 injector orifice plate 07# has performance problems during the warranty period (3 months), and it is confirmed to be product's problems after being tested, you can contact our salesmen to replace the same model or a reworked product with the same performance for free;

If the injector orifice plate is confirmed to be fault-free, it can only be repaired and it will be returned as original way.

#### (3) . 23670-51041 Injector Orifice Plate 07# Out of Warranty Coverage

The 23670-51041 injector orifice plate 07# is artificially damaged due to assembly errors during the process of assembling.

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com Website: www.shumatt.com

The warranty period has expired.

23670-51041 injector orifice plate 07# failure caused by high temperature, high pressure, humidity, rain and snow, saline-alkali land, earthquake, and used in abnormal environment.

23670-51041 injector orifice plate 07# damage caused by man-made reasons (throwing, strong magnetic field magnetization, set fire).

23670-51041 injector orifice plate 07# failure or injector damage caused by non-injector orifice plate's design, technology, manufacturing, quality and other issues.

I23670-51041 injector orifice plate 07# failure due to system pressure exceeding system approved pressure.

23670-51041 injector orifice plate 07# failure caused by impurities (water, lead, aluminum powder, iron powder, sulfide) in the system fuel exceeding the standard requirements.

23670-51041 injector orifice plate 07# failure caused by not installing according to the tightening torque specified in the vehicle engine maintenance manual (the tightening torque is too large or too small).

23670-51041 injector orifice plate 07# failure caused by not following the installation angle specified in the vehicle engine maintenance manual.

23670-51041 injector orifice plate 07# failure caused by not following the cleaning requirements specified in the vehicle engine maintenance manual.

23670-51041 injector orifice plate 07# failure caused by failure to replace consumable parts as specified in the vehicle engine maintenance manual.


#### 1.11.23670-51041 Injector Orifice Plate 07# Manufacturer

Manufacturer: Shenzhen Shumatt Technology Co., Ltd

#### 2. 23670-51041 Injector Orifice Plate 07# Technical Support

#### 2.1.23670-51041 Injector Orifice Plate 07# Inspection and Semi Ball Inspection

(1) Magnify 500 times under the microscope to check whether there is indentation on the sealing surface and the oil outlet hole of the orifice plate, check whether there is wear, scratch, damage, rust, depression, semicircle in the center hole of the orifice plate.

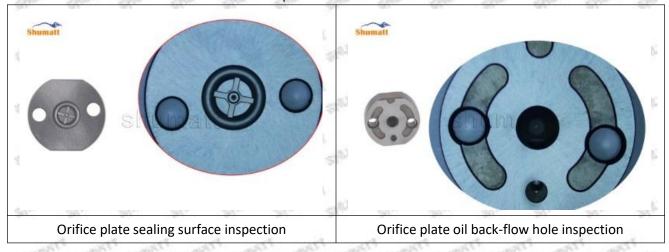

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

# SHUMATT

## Shenzhen Shumatt Technology Co., Ltd



Orifice plate center deviation inspection



There is indentation on the side, the orifice plate needs to be replaced



There is indentation in the middle oil back-flow hole, the orifice plate needs to be replaced



The middle oil back-flow hole is semicircular, the orifice plate needs to be replaced

Website: www.shumatt.com

⚠ The blockage of the oil back-flow hole will cause small volume of the oil return, and the oil will not be injected.

⚠ When oil back-flow hole becomes larger, it causes the semi ball to be not tightly sealed, which causes the fuel injection pressure cannot be established, then the fuel injector cannot work normally.


⚠ The wear on orifice plate's surface causes gap to the semi ball, which leads to large volume of oil return, in serious cases, the pressure can not be built up and nozzle will spray oil directly.

The blockage of the oil inlet hole (side hole) will cause small amount of oil return, the blockage of oil inlet side hole will cause the injector cannot build a pressure chamber, as a result, the injector cannot work normally.

(2) Magnified 500 times under the microscope, check the plane position of the semi ball, if there is any scratch, it is recommended to replace it.

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com

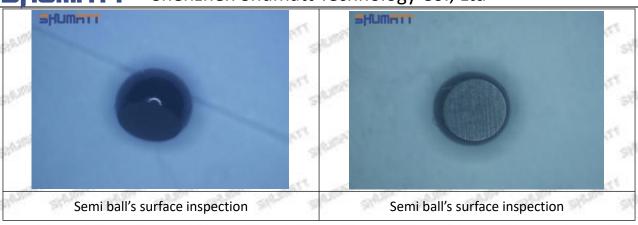

#### 2.2.23670-51041 Injector Orifice Plate 07# Level of Damage Inspection

#### (1) Slight Damaged



Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: <u>ruby@shumatt.com</u> Website: <u>www.shumatt.com</u>

#### (2) Moderate Damaged



Wear marks on edge



The misalignment of the semi ball causes damage to the orifice plate when installing it



The wear of the middle oil back-flow hole causes gap between semi ball and orifice plate, and causes the orifice plate to be washed out by high-pressure oil

-

#### (3) Highly Damaged



Obvious Wear marks on edge



The misalignment of the semi ball causes damage to the orifice plate when installing it

Mob/WhatsApp: +86 13410541523

Email: <a href="mailto:ruby@shumatt.com">ruby@shumatt.com</a>

© 2022 Shenzhen Shumatt Technology Co., Ltd

Tel: +8675523215133

# SHUMATT

# Shenzhen Shumatt Technology Co., Ltd



The wear of the middle oil back-flow hole causes gap between semi ball and orifice plate, and causes the orifice plate to be washed out by high-pressure oil

/

#### (4) More Pictures of Orifice Plate's Damage Details



The misalignment of the semi ball



Marks of the misalignment of the semi ball



The indentation of the misalignment of the semi ball



Washout marks caused by the presence of impurities in the fuel


Mob/WhatsApp: +86 13410541523

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

Tel: +8675523215133



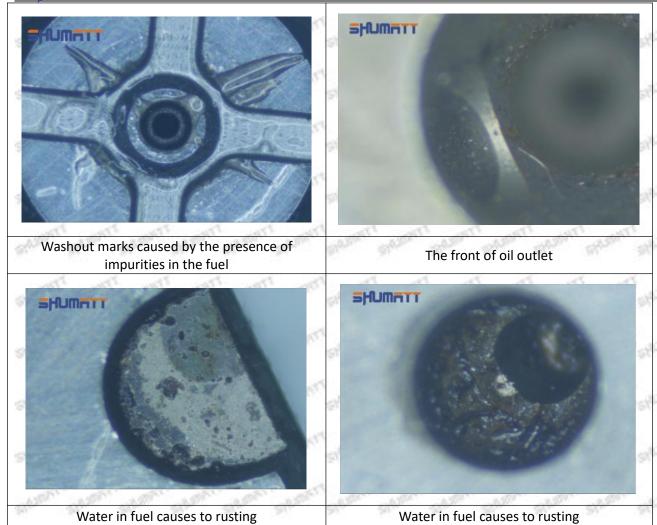

(5) Impact Classification According to The Degree of Damage to The Orifice Plate

Damage Type	Severe Damaged	General Damaged	Slight Damaged	
Classification	Α	В	C	
Impact on Overall Performance	Cause the fuel injector to not work properly, damage the vehicle engine or cause serious loss	Cause the injector cannot work normally, the vehicle cannot start normally, and the vehicle stop working	Cause Excessive oil return of injector and the vehicle engine shaking	
Impact on Features	Affect the normal operation Affect the normal		Affect the fuel injection volume of the injector	
Impact on Safety of Use	Cause serious damage to the engine and cause safety accident	Cause serious damage to the injector and may cause safety accident	Cause serious damage to the injectors and the vehicle stop working	

#### 2.3.23670-51041 Injector Orifice Plate 07# Installation Steps

(1) Before install 23670-51041 injector orifice plate 07#, clean it in an ultrasonic cleaning machine for 3-5 minutes so that to make the dirt, anti-rust oil oxide, paraffin base, naphthenic base, intermediate base, salt, lead naphthenate, zinc naphthenate, sodium petroleum sulfonate, barium petroleum sulfonate, calcium petroleum sulfonate, tallow diamine trioleate and rosin amine shedding fall off.

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: <u>ruby@shumatt.com</u> Website: <u>www.shumatt.com</u>



- (2) Use compressed air to clean up the cleaning fluid attached to the surface of the cleaned orifice plate to meet the use standard.
- (3) When installing the orifice plate, install it according to the oil hole A on the orifice plate, and match A, B, C on the orifice plate with A, B, C on the injector house. See as Pic No. 1



Pic No. 1

(4) Put the orifice plate into the injector with the stabilizing pin inserted into the stabilizing hole, see as Pic



Pic No. 2

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133 Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

Place the buffer lift measurement tool and dial gauge in the measuring tool (CRT220) at zero port for buffer stroke measurement, see as Pic No. 3



Pic No. 3

Buffer Stroke: When the solenoid valve is powered off, the spring force of the opened solenoid valve transfers to the center of the armature plate and drives the armature plate to go down. When the valve ball contacts the oil return hole in the center of the orifice plate, the oil back-flow hole is closed. However, the armature plate has to run down a certain distance under the inertia, and this distance is called the buffer stroke.

The normal range of the buffer stroke is 20-40 (um) microns.

(6) The measurement of buffer lift is in the normal range, within 20-40 (um) microns, see as Pic No. 4



Mob/WhatsApp: +86 13410541523 Tel: +8675523215133 Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

20/38



Pic No. 4

A Notice: The buffer stroke is the distance between the plane A of the semi ball to the plane B of the lock nut. If it is lower than 20-40 (um) microns, grin the B plane to 20-40 (um) microns. If it is higher than 20-40 (um) microns, check worn parts and replace it.



Pic No. 5

(7) Install the air clearance lift measuring tool and dial gauge in the measuring tool (CRT220) and place it at zero port for air clearance measurement, see as Pic No. 6



Pic No. 6

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133 Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd



Air clearance measurement normal range value is 45-50 (um) microns.

(8) The measurement of air clearance is in the normal range, within 45-50 (um) microns, see as Pic No. 7



Pic No. 7

▲ Notice: The air gap is the distance between plane A and plane B at the top of the armature, if the gap is not within 45-50 (um) microns, please replace it.



Mob/WhatsApp: +86 13410541523 Tel: +8675523215133 Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

Pic No. 8

#### (9) Install lock nut, see as Pic No. 9



Pic No. 9 (10) Install the (CRT230) 3-jaw tool inside the CRT029 on the lock nut, see as Pic No.10



Mob/WhatsApp: +86 13410541523 Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

Tel: +8675523215133



(11) Rotate (CRT084) clockwise with a torque wrench to tighten the lock nut to 70-75Nm, see as Pic No.11



Pic No.11

(12) When installing the semi ball, it should be noted that the plane of the semi ball cannot be reversed, otherwise it may cause damage to the orifice plate, see as Pic No.12



Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

Pic No.12

(13) place the semi ball on the armature, Pic No.13



Pic No.13

(14) Put the armature with semi ball into the lock nut (Make sure that the armature buffer stroke and armature air clearance lift are within the normal range), see as Pic No.14



Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

Pic No.14

(15) Measure the thickness of the armature lift adjustment gasket, see as Pic No.15



Pic No.15

(16) Put the armature lift adjustment gasket into the solenoid valve, see as Pic No.16



Pic No.16

Mob/WhatsApp: +86 13410541523

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

Tel: +8675523215133



(17) Install the armature stroke measuring tool and dial gauge in the measuring tool (CRT220) and place it on zero to measure armature travel, see as Pic No.17



Pic No.17

The stroke of the armature also controls the final lifting position of the semi ball. The greater the stroke of the armature is lifted, the longer it will take for the return oil to rush in the orifice plate, which will cause the orifice plate to fail in a short time and the injector to fail to work normally. However, the stroke of the armature should not be too small, otherwise it will cause insufficient fuel injection, resulting in problems such as reduced engine power and engine shaking.

(18) The measurement of the solenoid valve's lift of the armature is 3.413, see as Pic No.18

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

27 / 38





Pic No.18 (19) Measure the armature travel of the injector housing end again, see as Pic No.19



Pic No.19

(20) Subtract the two data measured in step 17 and step 18 to get the normal range value of armature stroke between 60-65um. If the value is too large or too small, replace the armature lift according to the measurement results and adjust the thickness of the shim to make the armature stroke range reach the normal range, see as Pic No.20

28 / 38

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: <u>ruby@shumatt.com</u> Website: <u>www.shumatt.com</u>



Pic No.20

(21) Put the solenoid valve spring adjustment shim into the solenoid valve, see as Pic No.21



Pic No.21

(22) Put the solenoid valve spring into the solenoid valve, see as Pic No.22

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133 Website: www.shumatt.com

Email: ruby@shumatt.com



Pic No.22

(23) Install the solenoid valve sealing ring on the fuel injector, see as Pic No.23



Pic No.23

(24) Install the solenoid valve on the fuel injector, If the solenoid valve is not replaced, install it according to

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133 Website: www.shumatt.com

Email: ruby@shumatt.com

the red mark. If there is a replacement solenoid valve, install it according to the standard angle which checked on Truck book Parts EPC APP, see as Pic No.24



Pic No.24

(25) Tighten the solenoid valve clockwise with a torque wrench (CRT084) to 25-35Nm, see as Pic No.25



Pic No.25

(a) Leak Test

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

31 / 38



Test Result:

1. The oil return is not sealed: there is no seal between the orifice plate and the semi ball.

May Lead To:

Oil return volume increased, oil leakage when the nozzle is in an open state, pressure cannot be established, and the injector fail to work, etc.

Solution:

Check or replace the orifice plate and Semi ball.

#### (b) VL Test

Test Result:

- 1. The maximum fuel injection volume is too large;
- 2. The maximum fuel injection volume is too small.

May Lead To:

- 1. The maximum fuel injection volume too large will cause the exhaust gas smoke and the fuel consumption will be high;
- 2. The maximum fuel injection volume too small will cause the engine powerlessness and delayed acceleration.

Solution:

- 1. When the maximum fuel injection volume is too large, make the armature stroke adjustment gasket or the solenoid valve spring adjustment gasket thin, and fine-tune the nozzle lift adjustment gasket;
- 2. When the maximum fuel injection volume is too small, make the armature stroke adjustment gasket or the solenoid valve spring adjustment gasket thick, and fine-tune the nozzle lift adjustment gasket.

#### 2.4.23670-51041 Injector Orifice Plate 07# Technical Support Obtaining Methods

- (1) 23670-51041 Injector Orifice Plate 07# Technical File, visit <a href="http://shumatt.com">http://shumatt.com</a> to get the technical file.
  - (2) Injector Technical Videos

**Facebook:** Visit <a href="https://www.facebook.com/hison.li">https://www.facebook.com/hison.li</a> to get the technical videos, constantly follow can get more information.

**YouTube:** <a href="https://www.youtube.com/channel/UCByvYBx7VjV">https://www.youtube.com/channel/UCByvYBx7VjV</a> mAfxh Hu-aw to get the technical videos, constantly follow can get more information.

**Shumatt:** Visit <a href="http://shumatt.com">http://shumatt.com</a> to get the technical videos.

(3) Injector Information Query Software

TruckBook Parts EPC APP, Android/Apple App Store download and install, visit <a href="http://shumatt.com">http://shumatt.com</a> to get the download and installation tutorial

(4) Search The fuel injector test data through TruckBook Parts EPC APP.

#### 3.23670-51041 Injector Orifice Plate 07# Purchase and Delivery

#### 3.1.23670-51041 Injector Orifice Plate 07# Purchase Payment Methods

**Payment methods:** T/T, PayPal, Alipay, WeChat

Please contact our salesmen for specific payment information.

#### 3.2.23670-51041 Injector Orifice Plate 07# Main Sales Markets

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: <u>ruby@shumatt.com</u> Website: <u>www.shumatt.com</u>

Injector orifice plate's main sales markets: Asia, Europe, North America, South America, Africa etc.

#### 3.3.23670-51041 Injector Orifice Plate 07# Declaration Requirements

Shumatt can assist customers to provide the following documents for import customs clearance: contract, invoice, packing list, bill of lading, insurance policy, certificate of origin, etc.

#### 3.4.23670-51041 Injector Orifice Plate 07# Shipping Ways

Destination in China areas: SF Express, Debon Express, the corresponding logistics company can be provided according to customer requirements in special cases.

Destinations out of China's areas: DHL, UPS, FedEx, TNT air, ocean or other shipping methods required by customers.

#### 3.5.23670-51041 Injector Orifice Plate 07# Lead time

Lead time: Send out within 3 – 7 working days after receiving payment (Except for special products and special cases).

### 3.6.23670-51041 Injector Orifice Plate 07# Logistics Time for Destination Out of China's Areas **DHL Logistics Time:**

Country or Region of Departure	Hong Kong, China	Other Countries or Regions of Asia	Australia and New Zealand	Europe	America	Other Countries
China's Mainland	7 Days	7 Days	8 Days	8 Days	8-12 Days	7-10 Days

#### UPS Logistics Time: Country or Region of Departure: China's Mainland

Country of Estimated Destination Arrival Time		Country of Destination	Estimated Arrival Time	Country of Destination	Estimated Arrival Time
Japan	3 Days	UK	5-7Days	Egypt	5-7 Days
Turkey	5-7 Days	Singapore	3 Days	Switzerland	5-7 Days
Bahrain	5-7 Days	Latvia	7-10 Days	New Zealand	7-10 Days
Sri Lanka	5-7 Days	Thailand	3 Days	Austria	5-7 Days
Romania	5-7 Days	Vietnam	3-5 Days	Estonia	5-7 Days
Malaysia	3-5 Days	Israel	5-7 Days	Mexico	7-10 Days
France	5-7 Days	America	5-7 Days	United Arab Emirates	5-7 Days
Italy	5-7 Days	Netherlands	5-7 Days	Bengal	7-10 Days
Lebanon	5-7 Days	Philippine	3-5 Days	Greece	7-10 Days
South Korea	3 Days	Spain	5-7 Days	Myanmar	5-7 Days
Canada	5-7 Days	Germany	5-7 Days	Saudi Arabia	7-10 Days
Portugal	5-7 Days	Australia	5-7 Days	South Africa	7-10 Days
Denmark	5-7 Days	Belgium	5-7 Days	Ukraine	7-10 Days
India	7-10 Days	Qatar	7-10 Days	Poland	5-7 Days
Indonesia	3-5 Days	Morocco	7-10 Days	Pakistan	7-10 Days
Kuwait	7-10 Days	2 September 2 Sept	Elgn. Slynn	28 28 28 28 28 28 28 28 28 28 28 28 28 2	SKA

⚠ The logistics time is for reference only, subjects are according to the actual arrival.

#### 3.7.23670-51041 Injector Orifice Plate 07# Packing

Domestic express packaging: Usually wrapped in waterproof scotch tape, such as picture No.1.

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com Website: www.shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

33 / 38

**International express packaging:** Wrapped with waterproof yellow tape After wrapping the black protective film, such as picture No. 2.

**Pallet Shipping:** Use fumigation free and recycling trays that meet export requirements, and use white wrapping protective film to wrap and bind with cable ties for the outside, such as picture No. 3, also, the products can be packaged according to customers' requirements.

The packing tray is made of plastic and can be recycled.

**A** Transparent tape, yellow tape, black wrapping protective film, white wrapping protective film are non-degradable materials, please dispose of them properly.

A Minors are prohibited from using transparent tape, yellow tape, black wrapping protective film, and white wrapping protective film to avoid personal injury.



Pic No. 1

Domestic express packaging:

Wrapped with Transparent tape



Pic No. 3



Pic No. 2

International express packaging:

Wrapped with yellow tape after wrapping black protective film

**Pallet Shipping:** Use pallet that meet export requirements, and use white wrapping protective film to wrap and bind with cable ties

#### 4.23670-51041 Injector Orifice Plate 07# Storage Standard

(1) Choose a suitable storage place

Email: ruby@shumatt.com

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

© 2022 Shenzhen Shumatt Technology Co., Ltd

34 / 38

The warehouse and cargo yard where 23670-51041 injector orifice plate 07# is stored should be kept clean and dry, and away from the factory buildings that generate harmful gases and dust; do not mix with acid, alkali, salt and other substances; the storage place should have a good drainage system; the cargo yard should be flattened with gravel or furnace ash etc. to enhance the water permeability of the surface layer to keep the reservoir area dry.

#### (2) Strict requirements of warehousing

Strict inspections should be carried out when 23670-51041 injector orifice plate 07# are put into storage, the surface cleaning work should be done well to remove water traces, oil stains, ash and other dirt, remove the rust and do anti-rust treatment in time. Packaged injectors must be protected from damage.

#### (3) Keep the warehouse dry and preventing moisture

The relative humidity is usually below 70% for 23670-51041 injector orifice plate 07# placed in the room, and the corrosion of the injector orifice plate is significantly reduced.

Injector orifice plates must be stored in the warehouse, and they are forbidden to store in the same warehouse with commodities with high water content.

#### (4) Stack Properly

After 23670-51041 injector orifice plate 07# is exposed to rain, the corrosion rate will increase significantly. The purpose of sealing is to isolate the injector orifice plate from rainwater and humid air, so the warehouse window should be checked in time to avoid rainwater entering the warehouse

If the 23670-51041 injector orifice plate 07# package is damaged, it should be repaired or replaced; when the package is damp, the packaging material should be dried; if the original anti-corrosion and oil applied at the factory is found to be damaged or dried up, it should be cleaned and re-applied oil in time.

▲ It is forbidden to leave 23670-51041 injector orifice plate 07# exposed in the air for a long time.

▲ It is forbidden to store acid, alkali, salt and other substances together with 23670-51041 injector orifice plate 07#.

▲ The unpacked 23670-51041 injector orifice plate 07# must be rust-proof during secondary storage.

#### 5. Company Information



Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

© 2022 Shenzhen Shumatt Technology Co., Ltd

Email: ruby@shumatt.com

#### 5.1. Company Introduction

Chinese Name: 深圳市舒马特科技有限公司

English Name: Shenzhen Shumatt Technology Co., Ltd

☐ Mob Phone/WeChat: +86-13410541523

☐ **HK Telephone**: +852-67653519

**Telephone:** +86-755-23215133

Email: ruby@shumatt.com

Website: www.shumatt.net

Shenzhen Office: 11-12, Floor 14, Building 13, Qinchengda Building, Exit A, Honglang North Subway Station, Bao'an District, Shenzhen, China's Mainland

Shenzhen Office: Room 428-430, Building B, Huafeng Zhigu Technology Industrial Park, Exit B, Fuyong Metro Station, Bao'an District, Shenzhen, China's Mainland

Hong Kong Office: Jianfa Street Industrial Zone, Tuen Mun, New Territories, Hong Kong, China

After-sales Service Address: Please contact our salesmen to obtain and provide the corresponding product maintenance reasons (Reference: 1.10. 23670-51041 Injector Orifice Plate 07# Warranty Instructions)

#### 5.2. Sales-men's Contact Information

Ruby Ivy	+86-13410541523 +86-18025299821	ruby@shumatt.com	Hison Li	Hison Li
_A377 _A5377	+86-18025299821	1 0 1 11		
- Million - 1959		sales@shumatt.com	Ivy Shumatt	Shumatt IVY
Rebecca	+86-18025349821	sales01@shumatt.com	Rebecca SHUMATT	SHUMATT Rebecc
Janny	+86-18028749821	sales02@shumatt.com	Janny shumatt	Janny Shumatt
Sam	+86-13316859821	Sales8@shumatt.com	Shumatt Sam	Sam Shumatt
Natalie	+86- 18938945856	sales15@shumatt.com	Shumatt Natalie	Lin Natalie
Ada	+86-1342286353	sales5@shumatt.com	Shumatt Ada	Ada Shumatt
Hison Li	+86-18318811871	web@shumatt.com	Hison Li	Hison Li
Mecca	+86-18938948618	sales11@shumatt.com	Shumatt Mecca	Shumatt Mecca
Eric	+86 18319033618	sales3@shumatt.com	25 SA	5100 510
Wayne ( Joaquín en español )	+86-13316959821	wayne@shumatt.com	Shumatt Wayne	Wayne Shumatt
Sylvia	+86 18312499884	sales6@shumatt.com	×07 ×0	C - 1000
85" 55" 5	Visit http://shumatt.com to ob	tain the latest information of salesm	en	SI SI
	Sam Natalie Ada Hison Li Mecca Eric Wayne ( Joaquín en español ) Sylvia	Sam       +86-13316859821         Natalie       +86- 18938945856         Ada       +86-1342286353         Hison Li       +86-18318811871         Mecca       +86-18938948618         Eric       +86 18319033618         Wayne ( Joaquín en español )       +86-13316959821         Sylvia       +86 18312499884         Visit <a href="http://shumatt.com">http://shumatt.com</a> to ob	Sam         +86-13316859821         Sales8@shumatt.com           Natalie         +86- 18938945856         sales15@shumatt.com           Ada         +86-1342286353         sales5@shumatt.com           Hison Li         +86-18318811871         web@shumatt.com           Mecca         +86-18938948618         sales11@shumatt.com           Eric         +86 18319033618         sales3@shumatt.com           Wayne ( Joaquín en español )         +86-13316959821         wayne@shumatt.com           Sylvia         +86 18312499884         sales6@shumatt.com           Visit <a href="http://shumatt.com">http://shumatt.com</a> to obtain the latest information of salesments	Janny         +86-18028749821         sales02@shumatt.com         Janny shumatt           Sam         +86-13316859821         Sales8@shumatt.com         Shumatt Sam           Natalie         +86-18938945856         sales15@shumatt.com         Shumatt Natalie           Ada         +86-1342286353         sales5@shumatt.com         Shumatt Ada           Hison Li         +86-18318811871         web@shumatt.com         Hison Li           Mecca         +86-18938948618         sales11@shumatt.com         Shumatt Mecca           Eric         +86 18319033618         sales3@shumatt.com           Wayne ( Joaquín en español )         +86-13316959821         wayne@shumatt.com         Shumatt Wayne

#### 6. Copyright Statement

The copyright of any contents (including but not limited to parameters, data, text, charts, images, sounds or videos, etc.) provided in "23670-51041 Injector Orifice Plate 07# Technical File" belongs to Shenzhen Shumatt Technology Co., Ltd. Without the prior written permission of Shenzhen Shumatt Technology Co., Ltd., any users are not allowed to modify the contents in "23670-51041 Injector Orifice"

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: <u>ruby@shumatt.com</u> Website: <u>www.shumatt.com</u>



Plate 07# Technical File" in any way. At the same time, any conditions to spread, re-post, display the contents of "23670-51041 Injector Orifice Plate 07# Technical File" should indicate source from Shenzhen Shumatt Technology Co., Ltd., Any actions failure to follow above conditions to use "23670-51041 Injector Orifice Plate 07# Technical File" will violate the "Copyright Law of the People's Republic of China" and other laws and regulations and the provisions of relevant international conventions.

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: <u>ruby@shumatt.com</u> Website: <u>www.shumatt.com</u>